


5. Close the fuel valve.
6. Remove the spark plug and pour about a tablespoon of engine oil in the cylinder. Turn over the engine so that the oil is evenly distributed and then refit the spark plug. Put the engine in the compression phase where the triangle mark on the sleeve of the starter is aligned with the upper hole in the starter. Note: Compression phase occurs every second revolution

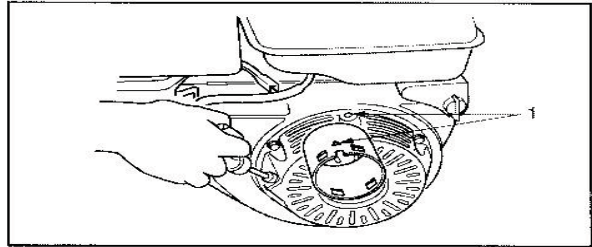

7. Lubricate all grease nipples, joints and cables as described in the chapter "Lubrication/Lubrication schedule".
8. Store the machine in a clean, dry place and cover it for extra protection.
9. Cover the blade and cutters with a thin coat of oil to avoid rust.

SPECIFICATIONS:

Model	PRX90	PRX130
Engine	Honda GX270QXC9	Honda GX390QXC9
Power	9 hp	13 hp
Idling speed	1250-1550 RPM	1250-1550 RPM
Spark plug	NK BPR6ES DENSO W20EPR-U	NK BPR6ES DENSO W20EPR-U
Fuel tank volume	6 liters/1.60 US Gal	6.5 liters/1.72 US Gal
Tires	4.10 - 4 (pneumatic)	13 x 5.00 - 6 (pneumatic)
Brake	Disk - Lever activated	Disk - Lever activated
Drive	Direct	Direct
Belt	3V	3V
Clutch	Centrifugal clutch	Centrifugal clutch
Cutters	12 cutters with tungsten carbide tips	12 cutters with tungsten carbide tips
Cutting depth	Approx 12" (30.48 cm)	Approx 12" (30.48 cm)
Length	71 (180 cm)	76" (193 cm)
Width	26.5 (67cm)	29.5 (75 cm)
Height	40" (102 cm)	42" (107 cm)
Weight	200 lbs. (90 kg)	240 lbs. (109 kg)

STORAGE & TECHNICAL DATA

-Continued-

Service Journal:

Action	Date, stamp, signature
--------	------------------------